



Professional Spreader Settings

SGN 200-220

Pounds of product per 1,000 Sq.Ft

SPREADER	1LB/ 1000 Sq.Ft	2LB/ 1000 Sq.Ft	3LB/ 1000 Sq.Ft	4LB/ 1000 Sq.Ft	5LB/ 1000 Sq.Ft	6LB/ 1000 Sq.Ft	7LB/ 1000 Sq.Ft
CYCLONE	3 1/2	4	4 1/2	5	5 1/2	5 3/4	6
EARTHWAY ROTARY	12	14	15	16	18	20	22
EZEE-FLOW	C1	C2	C2 1/2	C3	A4	A5	A6
GANDY	22	24	26	28	30	32	34
JET-SPRED II	3 1/2	4	4 1/2	5	5 1/2	5 3/4	6
JET-SPREAD III	4	4 1/2	5	5 1/2	6	6 1/4	6 1/2
LELY HR, 1250, 1500, 2010	3 II	4 II	5 II	6 II	6 1/2 II	7 II	7 1/2 II
LELY W	3 II	4 II	5 II	6 II	6 1/2 II	7 II	7 1/2 II
LESCO (LETTERS)	D	G	I	J	K	L	M
LESCO (NUMBERS)	10	15	17	21	22	24	26
ORTHO ROTARY	2	3	4 1/2	5 1/2	6	8	9
PennMulch PRIZELAWN HVO	E	J	L	N	O	P	R
PRIZELAWN OBR III	E	J	L	N	O	P	R
PRIZELAWN OBR II	2 1/2	4	4 1/2	5 1/2	6	6 1/2	8
PRIZELAWN LF-1	2	2 1/2	3 1/2	4	4 1/2	5	6
PRIZELAWN MPR I	2	2 1/2	3 1/2	4	4 1/2	5	6
ProScape® /PRIZELAWN BIGFOOT BF-1/SS	E	J	L	N	O	P	R
REPUBLIC ROTARY	2	3	4 1/2	5 1/2	6	8	9
SCOTTS RX7	D	E	G	I	J	L	M
SCOTTS ACCUPRO 2000, SR-2000	F	H	K	M	O	P	R
SCOTTS R8A/SR-1	I	K	L	M	N	O	P
SCOTTS AP	I	K	L	M	N	O	P
SCOTTS SR2000	I	K	L	M	N	O	P
SPYKER	3	4	4 1/2	4 3/4	5 1/4	5 1/2	6
VICON	20	22	24	26	30	31	32

Spreader Not Listed - Setting Tip: Set spreader at 1/4 to 1/3 of the dial as a starting point. This is just a guide, always calibrate spreader.

Note: These are approximate settings. Age and condition of spreader can affect setting. Always calibrate your spreader before using.