

Spring is just around the corner and planting will be here before we know it. Here is a checklist to help you prepare your planter:



LEVEL THE PLANTER.

Check your hitch height. Make sure the planter's tool bar is level (vertically) or running slightly up hill. When planters tip down, coulters run too deep and the closing wheels run too shallow.

CHECK TIRE PRESSURE.

While it seems basic on a ground planter, this can be the difference between a good solid stand and one that is thin due to drive tire slippage.



CHECK BRUSHINGS AND PARALLEL LINKAGE.

Worn bushings increase row bounce which increases seed bounce. Stand behind the row unit and wiggle it up and down and back and forth checking to make sure bushings are tight.



Check every chain. Kinked chains cause shock and vibration in the meter. Start with fresh, lubricated chains and check them daily. Include meter drive chains, transmission chains and insecticide box chains. The best tool for a worn chain is bolt cutters!

CALIBRATE SEED METERS.

Calibrated meters can add six or more bushels per acre. Send your meters and samples of your seed to our certified MeterMax Stand to gain accuracy.

DOUBLE DISK OPENERS

Test to make sure there is good contact between the double disks. Slide a business card from the top, down along the front of the disks, until the card won't lower any further. Mark that spot. Then, take the card from the back and slide it forward until it stops. Mark that spot and measure the distance between the two marks. If it is less than two inches, reshim or replace the disks. In general, the disks must be more that 14.5" in diameter.

SEED TUBES.

Inspect seed tubes for wear at the bottom. If they have a lip or fray on the bottom of the tube replace them.

CLOSING WHEEL SYSTEM.

Consider an alternative to rubber closing wheels. At Sunrise Cooperative, we don't recommend one over another, they all do different jobs in different conditions.






CLOSING WHEEL ALIGNMENT.

With your planter setting on concrete, pull straight ahead about five feet. Look at the mark left behind the planter by the double disk openers. The mark should run right down the centerline between closing wheels. If a closing wheel is running to close to the mark, adjust the closing wheels back to center.



With higher levels of residue, almost all planters can benefit from row cleaners if they are run correctly. Row cleaners are meant to sweep residue from the row to allow warming of the soil around the seed trench. Make sure row cleaners gently sweep residue - you don't want to move soil, just residue.

IMPROVE GERMINATION WITH SEED FIRMERS.

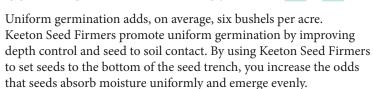

GAUGE WHEEL ADJUSTMENT.

Gauge wheels should be set so that when they are in the raised position there is a soft to medium amount of contact that occurs between the disk openers and the inner rubber of the gauge wheel. Once raised, spin the gauge wheel to feel the amount of contact.

CHECK FOR DISPLAY UPDATES.

Most manufacturers update display firmware to fix previous problems, but most importantly, allow new technologies to perform correctly. Check with your equipment dealer for updates.











